



Visitez Traxxas.com/manuals pour télécharger les instructions dans votre langue. Visite la página Traxxas.com/manuals para descargar el instrucciones en su idioma. Auf Traxxas.com/manuals, können Sie an leitung in Ihrer Sprache downloaden.

LED Light Kit Installation Instructions (fits #6 81

Covers Parts #8898, 8899

- ght Installation the 2.6x8mm and the from s (E) (8) to remove the front grille by (see Assembly Diagram, Fig. 11). (2) from each headlight lens (I) and ount. Retain and reuse the plastic hlie ect rdware.
- 2. oai
 - ctir

 - d power wire t and over the
- vn
- 3 reflector le ors/len gainst the
 - ınt.
- 4. eadlight le nd onto th **lote:** The ic headli e a
- 5. ne headli tht bυ ing
- 6. front using
- 7. 2.6x8 turn receptacles. and then sr
- o the recepta LED side ma es near each 8.
- wire lead nd for
- ve y (**Fig**. 5)

ΙF

- ght Installation tail light harnes ess with the cor for ease of installation. Install the side de (driver side) of the vehicle body. ceptacles. Bend the wire leads to lie flat No of
- rs (Fig. 6). body and 2. ncluded zip t the body in the locations


Light Ins

the 2.6x6mm (N) (3) from the roof viser retainer rom the body (see Assembly the oof

HKC19021-R03


LED Lighting Module Installation (Fig. 1) (#8898 Kit only):

- 1. Install the LED lighting module (A) on the left chassis floor pan. Secure with the 2.5x 15mm cap screws (2).
- Remove the screws from the receiver box cover and wire clamp; remove the cover and lamp (B).
- Remove the two 3x10mm counter unk cap screws from the battery tray (C). Lift up the battery tray and
- route the red wire (male connector) from the LED lighting module to the right side of the chassis, between the two T-Lock servos, and through the hole in the receiver box. Rug the connector into channel 1 of the receiver (D). **Note:** The connector can be plugged into any non-telemetry channel on the TQi receiver.
- 5. Apply an additional bead of silicone grease (Traxxas part #1647, sold separately) to
- the wire clamp. The grease will improve sealing, Reinstall the clamp and screws. 6. Make sure the o-ring is properly seated into the groove in the receiver box so that the cover will not pinch it or damage it in any way.
- Install the dover and screws. Inspect the cover to make sure the dring seal is not visible.
- 8. Reinstall the screws in the battery tray.
- 9. Connect the black wire (red female connector) from the LEQ lighting module to the red wire (male connector) exiting the XL-5 HV electronic speed control

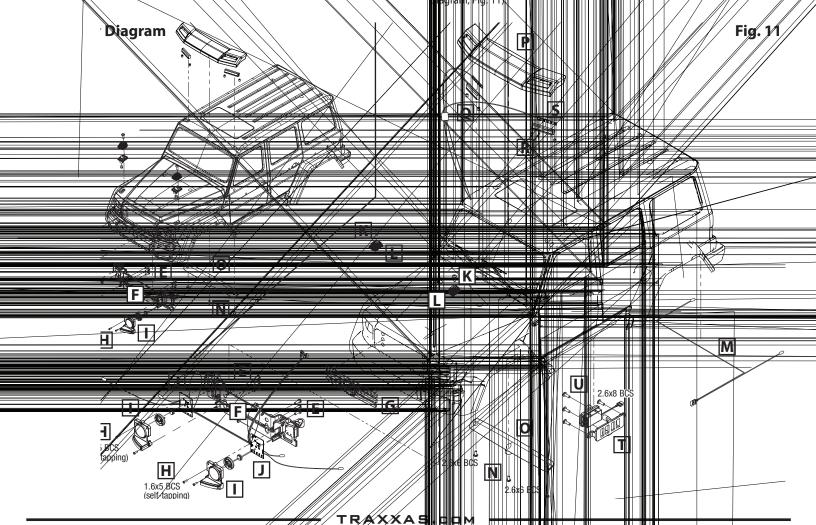

B

- 2. Remove the 3x4mm set screws (Q) (4) from the roof visor and remove the visor lens (R) (2). **Note orientation of the lens!**
- 3. Feed the LED boards of the roof visor harness (S) through the hole in the front right corner (passenger side) of the roof.
- Install the LED boards in the visor lens; reinstall the lens in the roof visor. Note orientation of the lens! Secure the lens with the 3x4mm set screws (4) removed during disassembly.
- 5. Route the harness connecting the two circuit boards through the wire retainers on the roof visor (Fig. 7).
- Reinstall the roof visor and visor retainer using the 2.6x6mm button-head cap screws removed during disassembly.
- Secure the wiring to the visor retainer with the included zip ties (3) (Fig. 8).
- 8. Plug the included jumper (green color band) into the port located on the small circuit board attached to the roof visor light harness (Fig. 9). Note: The jumper will allow the LED lights to go into full power (high beam) mode. The jumper is not required for the LED lights to function (the lights will remain in low power (low beam) mode if the jumper is not used).

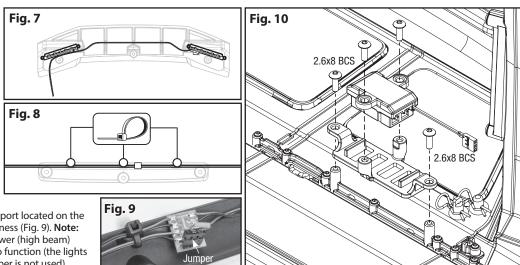

Wire Routing (Fig. 12)

When installing the LED light harnesses, note where the installation begins and ends in the Wiring Diagram (Fig. 12). Use zip ties to secure the wiring to the body in the locations provided. The zip ties do not need to be tight; allow some slack for wire movement.

Distribution Block Installation (Fig. 10)

1. Install the distribution block mount (T) and secure with the included 2.6x8 mm button-head screws (2) as shown in Fig. 10.

