

## #81502 ARRMA Senton 4x4, Big Rock 4x4 & Granite 4x4 Rear A-arms

**Installation Notes:** Swapping your stock A-arms with your new *RPM* versions is as simple as removing and replacing the stock A-arms, with only one easy difference.

*RPM* A-arms do not have a hole for an offset screw to retain the outer hinge pins. Instead, we use an in-line screw.


Slip the hinge pin in place, then follow the hinge pin with the included #10 Pan Head Screw.

**Caution:** It may take some force to start the screw. Do not overtighten it once seated. □

□  
**Note:** The outer hinge pin will only go in from one side of the A-arm.

Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.

**Install Hinge Pin from this side**

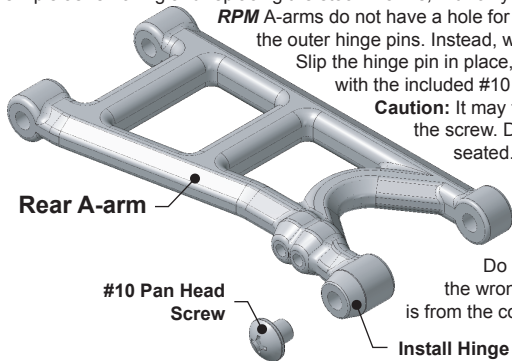

**Rear A-arm**

**#10 Pan Head  
Screw**