



LED Lighted Bumper Kit Installation Instructions - Bandit®, Rustler®, Bandit® VXL, & Rustler® VXL

Covers Part #3794

Kit contents:


- Front bumper assembly
- Rear bumper assembly
- Power Y-harness
- 3x12mm button-head cap screw (BCS) (1)
- 3x30mm button-head cap screw (BCS) (1)
- 3x40mm button-head cap screw (BCS) (1)
- 4x12mm countersunk cap screw (CCS) (4)
- Zip ties (3)

Tools required:

- 2mm hex wrench
- 2.5mm hex wrench
- Phillips screwdriver
- Silicone grease

A. POWER WIRE HARNESS INSTALLATION


- Remove the wire clamp by removing the two 2.5x8mm CS (Fig 1).
- Remove the receiver box cover by removing the two 3x10mm CS (Fig 1).
- Route the power Y-harness into the receiver box and plug it into any open channel on the receiver. Position the power Y-harness in a wire guide of the receiver box.

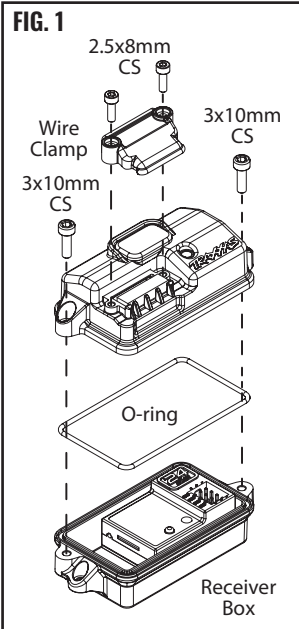

- Apply a small bead of silicone grease (*part #1647, sold separately*) to the wire clamp foam. Install the wire clamp and tighten the two 2.5x8mm cap screws securely. **Note:** Make sure not to pinch the wires in the clamp.
- Make sure the blue O-ring seal (Fig 1) is properly seated in the groove in the receiver box so that the cover will not pinch it or damage it in any way.
- Reinstall the cover on the receiver box and tighten the two 3x10mm cap screws securely. Inspect the cover to make sure that the O-ring seal is not visible.

B. FRONT BUMPER AND HEADLIGHTS INSTALLATION

Model 37054 shown. Your components and hardware may differ.

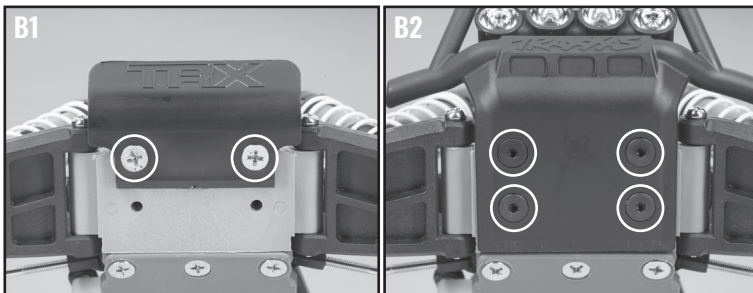

- Remove the existing front bumper from the chassis by removing the 4x12mm CCS (2).
- Install the new front bumper on the chassis with the four included 4x12mm CCS.
- Route the wire harness from the front bumper along the chassis toward the receiver box. Plug the red male connector from the power Y-harness into the red female connector from the headlights harness.
- Use the included zip tie (1) to secure the harness to the chassis (*refer to Fig. 2 Chassis Wiring for more detail*).

If you have questions or need technical assistance, call Traxxas at
1-888-TRAXXAS
(1-888-872-9927) (U.S. residents only)


FIG. 2 CHASSIS WIRING

Model 37054 shown. Your components and hardware may differ.



C. REAR BUMPER GUARD AND TAIL LIGHTS INSTALLATION

Model 37054 shown. Your components and hardware may differ.

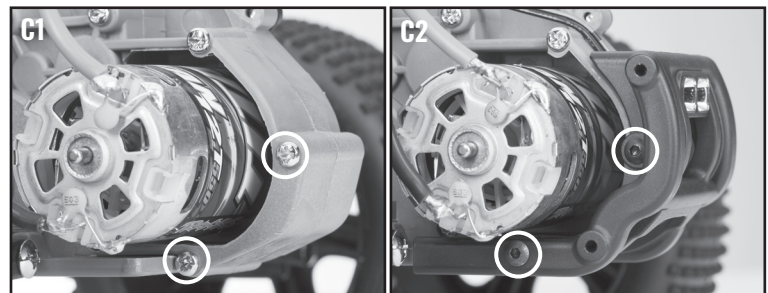

- Remove the 3x30 BCS (1) and 3x23 BCS (1) from the gearbox housing as shown.
- Attach the rear bumper guard to the gearbox housing with the included 3x30mm BCS (1) and 3x40mm BCS (1).
- Attach the rear bumper guard to the gearbox housing on the opposite side with the included 3x12mm BCS (1).
- Route the wire harness from the rear bumper guard along the chassis toward the receiver box. Plug the red male connector from the power Y-harness into the red female connector from the tail lights harness.
- Use the included zip tie (1) to secure the harness to the chassis (*refer to Fig. 2 Chassis Wiring for more detail*).

