





Visite la página TRAXXAS.com/manuals para descargar el instructiones en su idioma.

Auf TRAXXAS.com/manuals können Sie anleitung in Ihrer Sprache downloaden.

Covers Parta #8283, 8284


T-Lock Cable Installation Instructions


- 1. Insert the T-Lock cable into the axle housing (A) and secure with an E-clip (B).
- Thread the plastic ball end onto the T-Lock cable (C). DO NOT twist the inner cable. Continue until no threads are visible (D).
- 3. Snap the ball end onto the servo horn (E).
- 4. Install the T-Lock fork onto the T-Lock cable (F).
- Install the T-Lock fork into the axle housing (differential cover and components removed for clarity) (G). The fork will snap into place.


If you have questions or need technical assistance, call Traxxas at


1-888-TRAXXAS


(1-888-872-9927) (U.S. residents only).

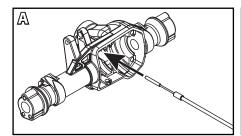


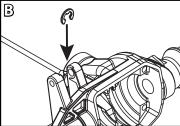


















TRAXXAS.COM _____

KC2539-R00 Rev 170607